




Time setting and winding instructions

Your mechanical watch will never need a battery. For proper time keeping, you will have to wind your watch daily, please turn the crown clockwise at Position (A), until it feels tight.

Please note, do not overwind your timepiece as it will damage the mainspring.

For time setting, pull the crown to position (2) then turn it to either direction and set to correct time, then press the crown back to position (1) *Please note the crown must be to position (2) or it will not set correct time.*

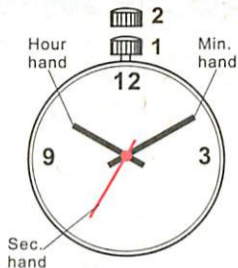


Time setting and winding instructions

Your mechanical watch will never need a battery. For proper time keeping, you will have to wind your watch daily, please turn the crown clockwise at Position (A), until it feels tight.

Please note, do not overwind your timepiece as it will damage the mainspring.

For time setting, pull the crown to position (2) then turn it to either direction and set to correct time, then press the crown back to position (1) *Please note the crown must be to position (2) or it will not set correct time.*

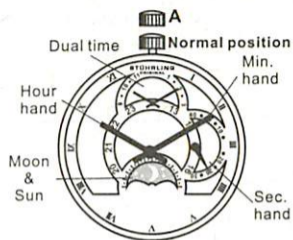

Turn the crown clockwise at normal position for winding.

When setting the time, just pull the crown at position (A) and follow the steps below!

- 1) Turn the crown clockwise to set the destination time
- 2) When the destination time is set, turn the crown anti-clockwise until feeling click, destination time is locked!
- 3) Keep turning the crown anti-clockwise for setting the Home time, sun & moon display will follow the time set again!
(You will see the minutes hand of destination time still moving, but it will not change the time set!)
- 4) Push back the crown in normal position after setting the correct time!

WATER RESISTANT

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

*Water Resistant 3ATM or 30M (100 Feet)

Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.

*Water Resistant 5ATM or 50m (165 Feet)

Suitable for showering or swimming in shallow water.

*Water Resistant 10ATM or 100M (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

*Diver's 20ATM or 200M (660 Feet)

Meets the higher requirements of water resistant and suitable for scuba diving.
We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters.

GENERAL CARE FOR A WATER RESISTANT WATCH

***DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.**

***DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.**

***AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STRAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.**

***LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.**

STÜHRLING ORIGINAL



INSTRUCTION MANUAL

MECHANICAL MOVEMENT (POCKET WATCH)

[PW]

*Remarks :Please note, do not overwind your timepiece as it will damage the mainspring.
For proper time keeping, you will have to wind your watch daily, please turn the crown clockwise until it feels tight.*